


5252 MARBLE CUTTER 110MM (CM4SA)

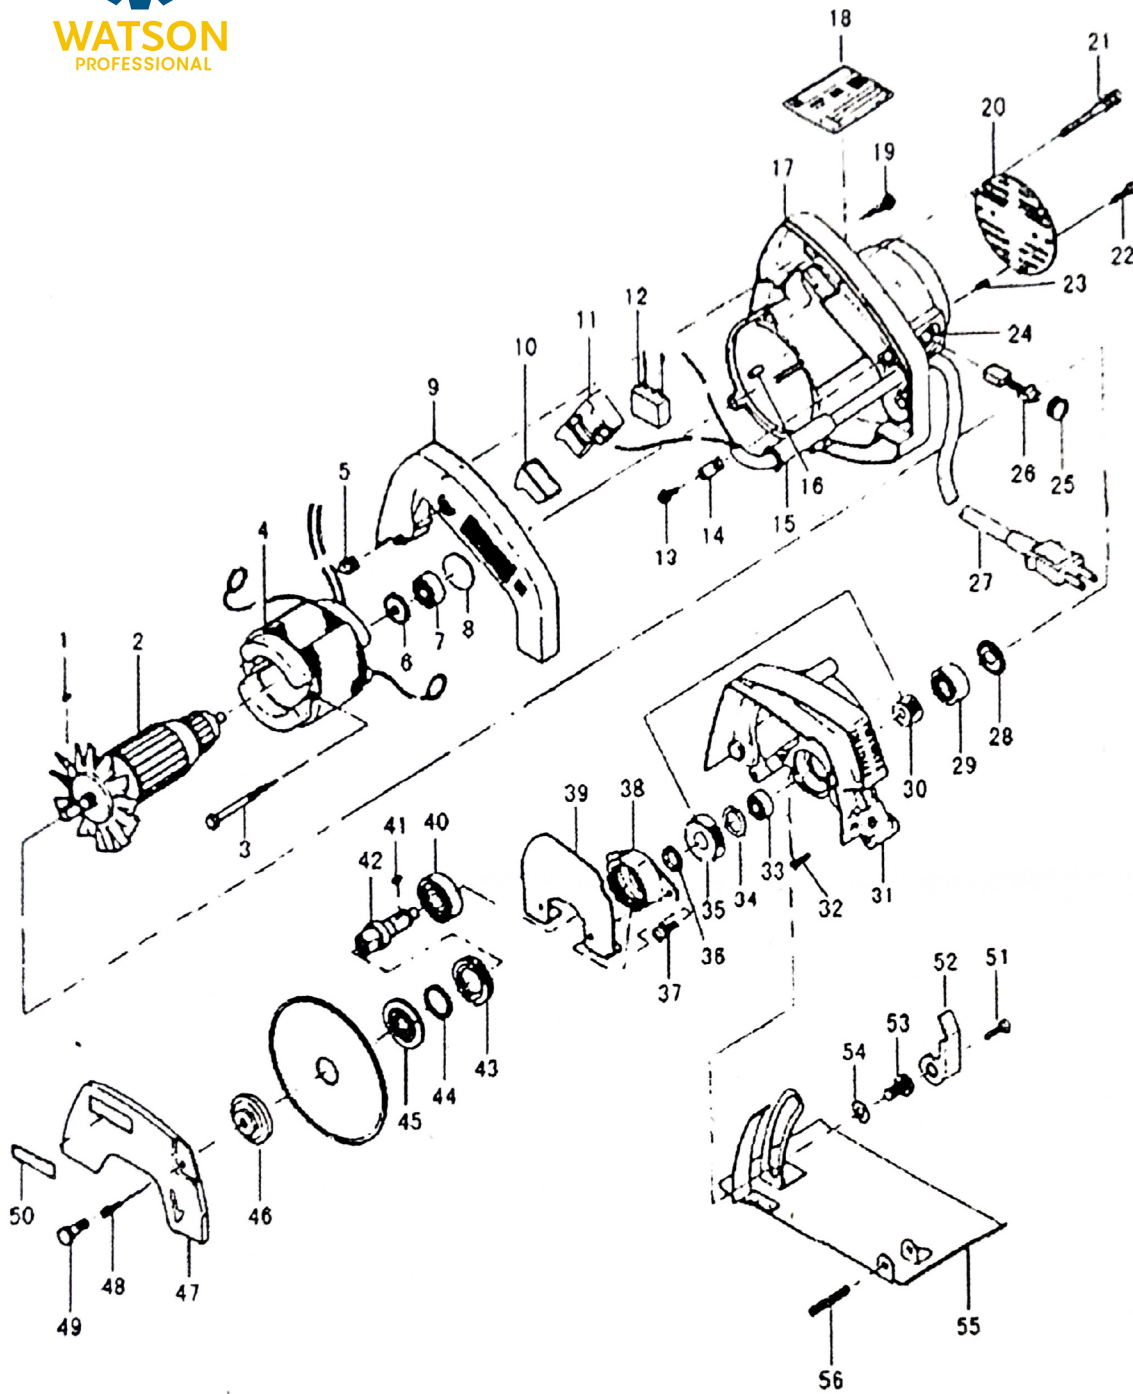

5252 Marble Cutter 110mm (CM4SA)

S.NO	Part No.	Spare Part Name	S.NO	Part No.	Spare Part Name
1	5252-001	Woodruff Key	32	5252-032	Pan Head Screw M5X14
2	5252-002	Armature Assembly	33	5252-033	Pan Ball Bearing 626-2LS
3	5252-003	PanHead Tapping Screw M6X60	34	5252-034	Circlip for Shaft
4	5252-004	Stator Assembly	35	5252-035	Driven Helical Gear
5	5252-005	Dust Cover	36	5252-036	Spacer
6	5252-006	Insulation Washer	37	5252-037	Pan Head Screw M5X20(with Spring and Flat Washers)
7	5252-007	Ball Bearing 608-2LS	38	5252-038	Bearing Holder
8	5252-008	Label	39	5252-039	GearHousing Cover
9	5252-009	Handle Cover	40	5252-040	Ball Bearing 6201-2LS
10	5252-010	Switch Cover	41	5252-041	Woodruff Key
11	5252-011	Trigger Switch	42	5252-042	Drive Spindle
12	5252-012	Capacitor 0.22 FF	43	5252-043	Bearing Retainer
13	5252-013	Pan Head Tapping Screw ST4.2X15 (with Flat Washer)	44	5252-044	O Ring
14	5252-014	Strain Relief	45	5252-045	Inner Flange
15	5252-015	Cord Guard	46	5252-046	Outer Flange
16	5252-016	Rubber Pin	47	5252-047	Wheel Cover
17	5252-017	Motor Housing	48	5252-048	Pan Head Screw M4X8
18	5252-018	eplate	49	5252-049	Clamping Screw
19	5252-019	Head Tapping Screw ST4.2X18	50	5252-050	Label
20	5252-020	ar Cover	51	5252-051	Pan Head Screw M4X10
21	5252-021	Pan Head Screw M5 X 50 (with Spring and Flat Washers)	52	5252-052	Adjusting Rod
22	5252-022	Pan Head Screw M5 X 14 (with Spring and Flat Washers)	53	5252-053	Hex Bolt
23	5252-023	Hex Socket Head Screw with Flat Point M5 X 8	54	5252-054	Flat Washer
24	5252-024	Carbon Brush Holder	55	5252-055	Base Assembly
25	5252-025	Brush Holder Cap	56	5252-056	Spring Round Pin
26	5252-026	Carbon Brush	Accessories		Special Wrench
27	5252-027	Cord			Socket Wrench
28	5252-028	Dustproof Shim			Water Nozzle
29	5252-029	Ball Bearing 629-2LS			Adjusting Roll
30	5252-030	Driving Helical Gear			Adjusting RollHolder
31	5252-031	Gear Housing			