


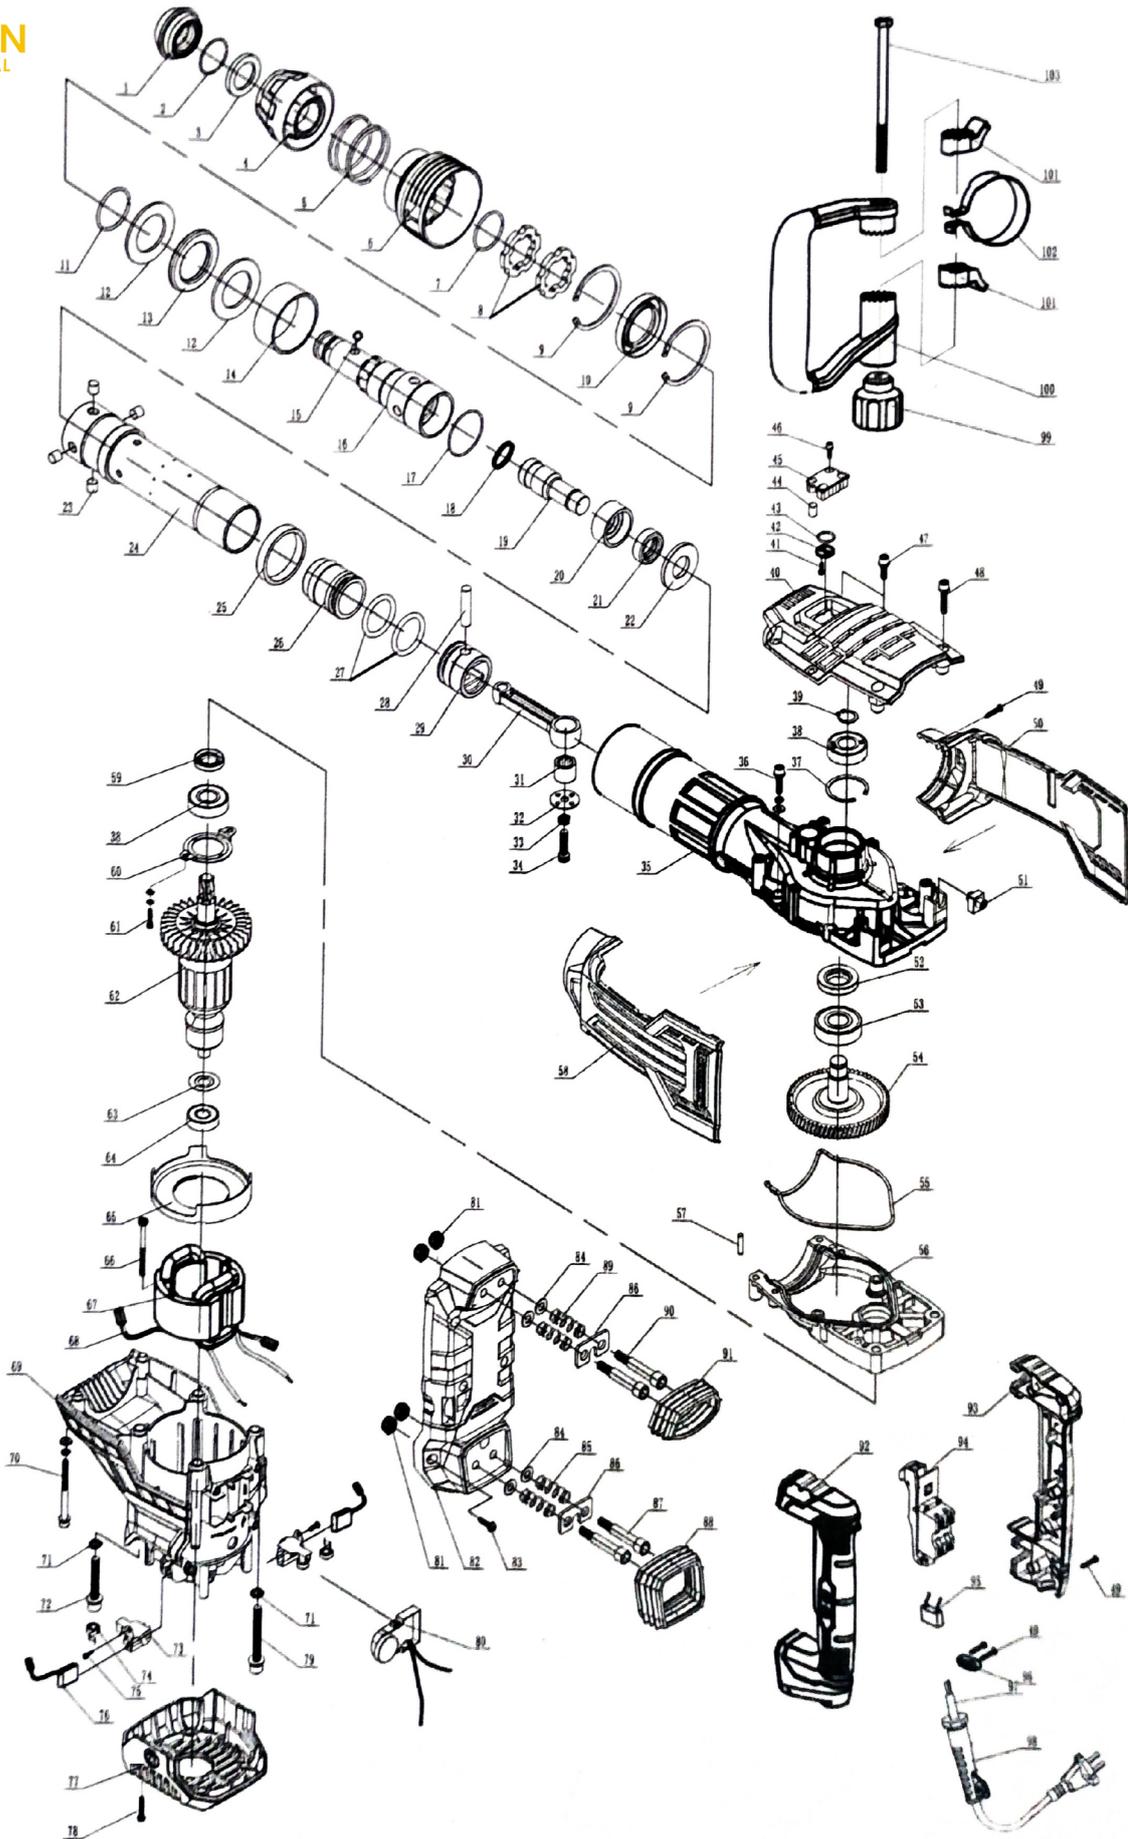

WATSON
PROFESSIONAL

5353 DEMOLITION HAMMER 11E



WATSON POWERTOOLS

5353 Demolition Hammer 11E

S.No	Part No	Spare Part Name
1	5353-001	rubber head
2	5353-002	steel ring 26*2.5
3	5353-003	Steel frame spring 44*29.1*5
4	5353-004	Steel frame
5	5353-005	Steel frame spring 60*3*5.5*60
6	5353-006	angle adjusting plate
7	5353-007	Ring 34.5*2
8	5353-008	angle adjusting plate $\Phi 52*31.5*3$
9	5353-009	Ring 65
10	5353-010	Seal Ring 40*65*10
11	5353-011	Ring 37*2
12	5353-012	cylinder ring 64.8*40.3*3
13	5353-013	cushion 40*65*7
14	5353-014	locating sleeve 65*58.1*26
15	5353-015	Ball 7.94
16	5353-016	sleeve
17	5353-017	O-ring 44*2
18	5353-018	X-ring 28*1*4
19	5353-019	punch hammer
20	5353-020	punch hammer hold
21	5353-021	flat washer 6
22	5353-022	cushion 48.8*23*5
23	5353-023	pin 10*10
24	5353-024	cylinder
25	5353-025	steel sleeve 60*51.1*10
26	5353-026	impact hammer
27	5353-027	O-ring 35.5*5
28	5353-028	Psiton Pin 10*43.8
29	5353-029	Psiton
30	5353-030	Connecting Rod
31	5353-031	Needle Bearing NK1616
32	5353-032	Connecting Rod 28*8.2*1.5
33	5353-033	Ring 8
34	5353-034	Screw M8x22
35	5353-035	Gear box
36	5353-036	Screw M6x25
37	5353-037	Ring 40
38	5353-038	Bearing 6203-RS
39	5353-039	Ring 17
40	5353-040	Upper cover
41	5353-041	Self-tapping Screw ST3.9*10
42	5353-042	Oil box Cover
43	5353-043	O-ring 18*2
44	5353-044	Wool felt 7*15
45	5353-045	Oil Cover
46	5353-046	screw M4*14
47	5353-047	screw M6*20
48	5353-048	screw M6*30
49	5353-049	Self-tapping Screw ST3.9*16

S.No	Part No	Spare Part Name
50	5353-050	Right housing cover
51	5353-051	Connection block
52	5353-052	oil seal 20*40*4.5
53	5353-053	Bearing 6204-RS
54	5353-054	Eccentric shaft
55	5353-055	Seal ring for middle cover
56	5353-056	Middle cover
57	5353-057	Piston pin 6X23.5
58	5353-058	Left housing cover
59	5353-059	Oil seal 17*30*6
60	5353-060	Bearing plate
61	5353-061	Screw M5*14
62	5353-062	Rotor
63	5353-063	Dust-proof gasket 12.1*31*0.5
64	5353-064	Bearing 6201
65	5353-065	Guide ring
66	5353-066	Self-tapping Screw ST4.8*60
67	5353-067	Stator
68	5353-068	Spring 6.3
69	5353-069	Case
70	5353-070	Screw M6*70
71	5353-071	Ring 8
72	5353-072	Screw M8*50
73	5353-073	Carbon brush holder
74	5353-074	Coil spring
75	5353-075	Screw M3.9*14
76	5353-076	Carbon brush
77	5353-077	Back cover
78	5353-078	Self-tapping Screw ST4.8*16
79	5353-079	Screw M8*65
80	5353-080	Speeder
81	5353-081	Hexagonal locking nut M8
82	5353-082	Handle base
83	5353-083	Self-tapping Screw ST4.8*18
84	5353-084	Washer 8
85	5353-085	The damping spring $\Phi 2$
86	5353-086	vibration damper plate
87	5353-087	Damping screw
88	5353-088	Damping sleeve B
89	5353-089	Damping spring $\Phi 10.5 \times \Phi 1.5 \times 32 \times 6$
90	5353-090	Damping screw M8*50
91	5353-091	Damping sleeve A
92	5353-092	Left handle
93	5353-093	Right handle
94	5353-094	Switch
95	5353-095	Capacitor 0.33 μ F
96	5353-096	Cable clamp plate
97	5353-097	Cable
98	5353-098	Cable sleeve
99	5353-099	Knob
100	5353-0100	Auxiliary handle
101	5353-0101	Handle fixing block
102	5353-0102	Hoop
103	5353-0103	Outer hexagonal bolt M8*140