


5350 DEMOLITION HAMMER 17MM (4 NUT)

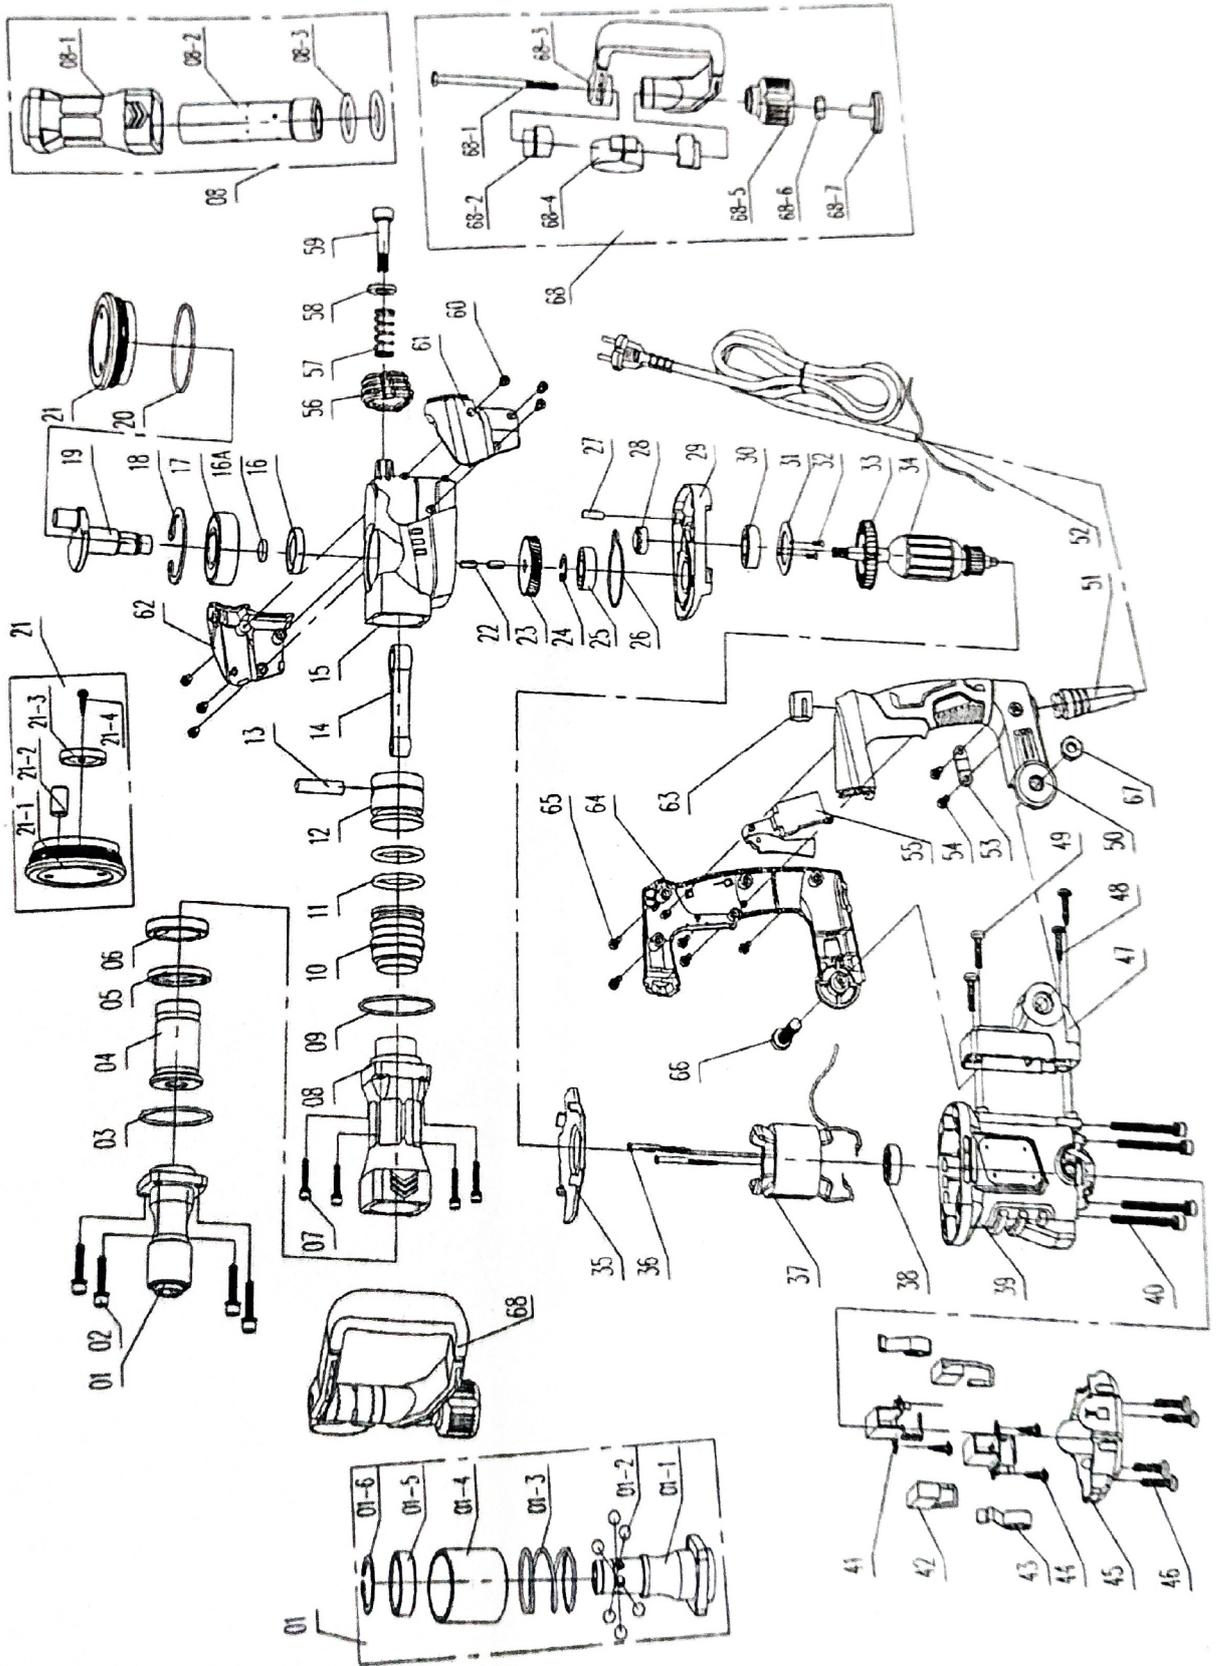

5350 Demolition Hammer 17mm (4 Nut)

S.NO	PART NO.	SPARE PART NAME	QTY
1	5350-001	Iron head assembly	1
1-1	5350-001-1	iron head	6
1-2	5350-001-2	Steel ball08	1
1-3	5350-001-3	Steel ball frame spring	1
1-4	5350-001-4	steel ball rack	1
1-5	5350-001-5	steel ball hoop	1
1-6	5350-001-6	28 axis circlip	4
2	5350-002	Hexagon socket three combination screws	1
3	5350-003	O-ring F047x043*2	1
4	5350-004	punch needle	1
5	5350-005	punch gasket	1
6	5350-006	Buffer ring 0	4
7	5350-007	Hexagon socket three combination screws	1
8	5350-008	Front barrel assembly	1
8-1	5350-008-1	front tube	1
8-2	5350-008-2	Cylinder035 0855	2
8-3	5350-008-3	O-ring035.1x027.5*3.8	1
9	5350-009	O-ring	1
10	5350-010	battering ram	2
11	5350-011	O-ring035.1x027.5*3.8	1
12	5350-012	Piston035	1
13	5350-013	Piston ping8*34	1
14	5350-014	link	1
15	5350-015	Gearbox	1
16	5350-016	Skeleton oil seal	1
16A	5350-016A	Skeleton oil seal gasket cover	1
17	5350-017	Bearing 6303-RZZ	1
18	5350-018	47 hole circlip	1
19	5350-019	Eccentric shaft	1
20	5350-020	O-ring060x2	1
21	5350-021	oil cap	1
21-1	5350-021-1	oil cap	1
21-2	5350-021-2	breathable linoleum	1
21-3	5350-021-3	fixed plate	1
21-4	5350-021-4	Cross pan head and tail self-tapping screws	1
22	5350-022	Square key 4x12	2
23	5350-023	gear	1
24	5350-024	14 axis circlip	1
25	5350-025	Bearing 6001-RZ	1
26	5350-026	Figure 8 sealing ring 6038055	1
27	5350-027	Positioning pino5x16	1
28	5350-028	Oil throw ring 18x12 3015	1
29	5350-029	middle cover	1
30	5350-030	Bearing 6001-RZZ	1
31	5350-031	6001 bearing gland	1
32	5350-032	Cross three combination screws	2
33	5350-033	wind leaves	1
34	5350-034	Motor rotor 044.4x45	1
35	5350-035	windshield	1
36	5350-036	Cross recessed pan head tapping screws	2
37	5350-037	Motor stator072x45	1
38	5350-038	628 bearing	1
39	5350-039	Chassis + 628 bearing sleeve	1
40	5350-040	Hexagon socket three combination screws	4
41	5350-041	Carbon brush holder	2
42	5350-042	Carbon brush 6x10x20	2
43	5350-043	Carbon brush compression spring	2
44	5350-044	Cross recessed pan head tapping screws	4

5350 Demolition Hammer 17mm (4 Nut)			
S.NO	PART NO.	SPARE PART NAME	QTY
16	5350-016	rear cover	1
47	5350-047	Cross pan head self-tapping screws	4
48	5350-048	Speed	1
49	5350-049	control box	2
50	5350-050	Cross recessed pan head slotted pointed tai	2
51	5350-051	Cross recessed pan head tapping screws	1
52	5350-052	Right handle + rubber coating	1
53	5350-053	Power cord jacket	1
54	5350-054	cord assembly	1
55	5350-055	crimping wrench	2
56	5350-056	Cross pan head self-tapping screws	1
	5350-0	Switch 230V 6A 110V 12A	1
57	5350-057	Shock absorbing sleeve 3016	1
58	5350-058	shock absorber spring	1
59	5350-059	Shock absorbing iron sheet 020x010x3	1
60	5350-060	Shock absorbing stud M8x10x35	6
61	5350-061	Phillips pan head screw M4x8	1
62	5350-062	Right decorative cover	1
63	5350-063	left decorative cover	1
64	5350-064	blister	1
65	5350-065	Left handle + rubber coating	5
66	5350-066	Cross pan head self-tapping screws	1
67	5350-067	Hexagon socket bolt M8x35	1
68	5350-068	Nylon self-locking	
68-1	5350-068-1	Auxiliary handle assembly	1
68-2	5350-068-2	"External hexagonal bolt M8x130	2
68-3	5350-068-3	handle clip	1
68-4	5350-068-4	Auxiliary handle	1
68-5	5350-068-5	Hug hoop	1
68-6	5350-068-6	hand wheel	1
	5350-0	Hexagonal nut M8	1