

5460 Cut off Machine 355 mm

S.NO	PART NO.	SPARE PART NAME	35A	5460-035A	Pan Head Tapping Screw ST4x18.
1	5460-001	Ball Bearing 6204W	36	5460-036	Left Handle Set (With Item 40)
2	5460-002	Woodruff Key	37	5460-037	Nameplate
3	5460-003	Drive Spindle	38	5460-038	Pan Head Screw M5x 10 (withSpring
4	5460-004	Safety Guard	39	5460-039	Switch
5	5460-005	Flange	40	5460-040	Right Handle Set (With Item 36)
6	5460-006	Pan Head Screw M5x52(with Spring and Flat Washer)	41	5460-041	Pan Head Screw M5x52 (withSpring and Flat Washer)
7	5460-007	Damper	42	5460-042	Pan Head Screw M5x30 (withSpring and
8	5460-008	Washer	43	5460-043	Pan Head Screw M5 X 10 (withSpring
9	5460-009	Spring Washer	44	5460-044	Rear Cover
10	5460-010	Hex. Bolt M10x20	45	5460-045	Hex. Socket Head PointlessScrew M5 x
13	5460-013	Stator Assembly	46	5460-046	Carbon Brush I-ff) Ider
14	5460-014	Pan Head Screw M5x80(with Spring and Flat Washer)	47	5460-047	Carbon Brush
15	5460-015	Baffle Plate	48	5460-048	Brush Holder Cap
16	5460-016	Ball Bearing 6200ZZ	49	5460-049	Motor Housing
17	5460-017	Rubber Pin	50	5460-050	Chain Hook Pin
18	5460-018	Armature Assembly	51	5460-051	Hex. Lock Nut M6
19	5460-019	Ball Bearing 6202-2Z	52	5460-052	Pan Head Tapping Screw ST4.2x16
20	5460-020	O Ring	53	5460-053	Strain Relief
21	5460-021	Wave Washer	54	5460-054	Insulation Washer
22	5460-022	Gear Housing	55	5460-055	Cord Guard
23	5460-023	Spindle Lock Pin	56	5460-056	Cord
24	5460-024	Compression Spring	57	5460-057	Hex. Nut M5
25	5460-025	Lock Nut M5	59	5460-059	Torsion Spring
26	5460-026	Adjustable Guard	60	5460-060	Base Assembly
27	5460-027	Bolt	66	5460-066	Hex. Head Screw M16x170
29	5460-029	Rubber Pin	67	5460-067	Washer
30	5460-030	Ball Bearing 6000ZZ	68	5460-068	Pipe
31	5460-031	Circlip for Shaft	70	5460-070	Pan Head Screw M8 X 10
32	5460-032	Gear	71	5460-071	Spark Guard
33	5460-033	Rubber Pin	72	5460-072	Hex. Lock Nut M6
34	5460-034	Gear Housing Cover	73	5460-073	Hex. Lock Nut M16
35	5460-035	Pan Head Tapping Screw ST4.2 X 22			